

# LOCKING CAP WITH KEY AB IVC

## **WARNINGS FOR THE USER:**

· Use in accordance to the purpose.

# **INSTALLATION INSTRUCTIONS:**

Filler cap is a device responsible for closing the filler in the petro tank. Filler cap is made of plastic material, resistant to fuel impact. It has a rubber seal which protects and caulks the filler from the outflow.

Filler cap should be mounted to cars that have the fuel fille adjusted to his kind of cap and cars that have the fully functional.

While using the caps, it is forbidden to use them in cars, where the petrol filler is not adjusted to the specific kinds of caps. It is also forbidden to use any additional devices while unbolting/bolting caulking the cap, because it may cause its failure. Caps may be used only in accordance with their destination.

- 1. Take the cap out of the package
- 2. Remove the foil
- 3. Screw the cap in the fuel filler
- 4. Tighten the cap with the reasonable strength, in order that the seal will not be damaged
- 5. In the caps with the key, twist the key in order to close the cap and gently check whether the cap grinds securely and safely to the petrol filler.



#### PHOTO:



### TECHNICAL SPECIFICATIONS:

	MATERIAL	DIAMETER	INSIDE DIAMETER	OEM	MOUNTING	PACKING - BULK BOX
	» Plastic	» 60mm	» 58 mm	» 1526674	» keys 2 szt.	» cart. dim.: 515x315x220mm » weight: 10kg » 50 pcs/bulk box

We reserve the right to change technical data and any errors. Photos and specifications are for reference only, and the actual product may vary slightly. Reproduction in whole or parts of the catalog without written authorization is prohibited.