



FOOT GREASE PUMP 6L

Manual Use Instruction

SAFETY INSTRUCTIONS - PLEASE READ THE INSTRUCTIONS
BEFORE USING THE APPLIANCE

1. Check if there is order in the workplace.
2. Assess whether the conditions at the place of use of the lubricator are safe.
3. Store the equipment in a dry place and out of reach of children.
4. Lubricators should only be used for tasks intended for it.
5. Before using the lubricator, be prepared, dress the appropriate work outfit and safety shoes - non-slip.
6. The device may splash with grease, that's why protect your eyes, wear glasses.
7. Check the technical condition of the device. If you find any damage, take lubricators to an authorized service technician.
8. Make sure that all tools with which the lubricator was adjusted have been removed from it.
9. During use, be fully concentrated to avoid accident at work or damage to the device.
10. It is forbidden to use the lubricator after consumption of alcohol, drugs and drugs slowing down the reaction.
11. The device's service should be performed by qualified personnel.

DEVICE SPECIFICATION

Model	S1903
Tank capacity	6L
Efficiency for one cycle	3-5grams of grease
The length of the hose	1,8m
Max. Working pressure	20-25Mpa
Drive type	Lever foot pedal
System type	membrane
Net Weight	10kg

APPLICATION OF THE APPLIANCE

Foot grease gun is a tool for injecting grease into hydraulic systems. A suitable density grease is pressed through a pressure hose. The pressure is generated by the strength of our muscles by pressing the lever of the lubricator. Foot grease guns are one of the most commonly used tools of this type in industry and production. These tools are reliable, they are also easy to use, very efficient and, what's the most important, they extend the operation time of the parts subject to friction in large and heavy vehicles. Lubricator is widely used in cars, tractors and many industrial machines.

LIST OF ACTIONS BEFORE YOU BEGIN

1. Unscrew the screws securing the cover of the lubricator.
2. Pull the cover assembly with the pump. To do this, turn it about 30 degrees and pull it lightly. Do not jerk.
3. Fill the lubricator with the selected grease. To avoid aerating, press the lubricant down to the bottom of the tank.
4. While holding the top cover of the container vertically, gently put the upper disk in it.
5. After opening the valve, you can start working.

LIST OF OPERATIONS WHILE WORKING WITH THE DEVICE

1. Point the gun with the grease to the desired location.
2. Apply grease.
3. Clean the gun and work area.

MAINTENANCE OF THE APPLIANCE

1. Make sure that no water gets into the container behind the grease, as this will cause corrosion.
2. If a very viscous lubricant is used, approximately 300ml of lubricating oil should be added.
3. Do not twist or bend the pressure line, because it shortens its life and may lead to unsealing.
4. During the work break, release the pressure from the lubricator. This increases the service life of the piston.
5. Clean and service the lubricator and lines.
6. Do not use contaminated grease as this may damage the lubricator. The grease should be stored in an airtight container.

ATTENTION!

The lubricator is used to press grease under high pressure, so do not aim the gun at people or animals.

Contact with the applied material may cause skin irritation.

If the material comes in contact with the body, immediately rinse the body with water.

It is also recommended to wear protective clothing to minimize the risk of irritation.

Some lubricants contain carcinogenic ingredients.

Remember this by choosing a lubricant.

Dimensions of the lubricator:


The base 19.5cm x 40cm

Height 55cm

Grease pump hose with greasing gun and rechargeable nozzle:



CONSTRUCTION OF THE LUBRICATOR

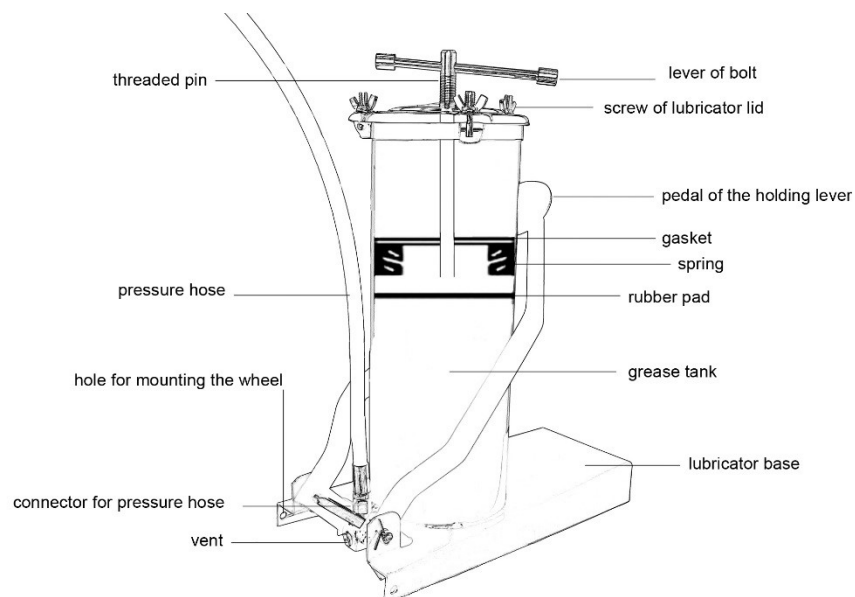

PROBLEMS AND SOLUTIONS DURING USE

1. When the gun does not feed grease, check the hose and gun. If everything is fine, check if the grease is too thick.
2. When the grease leaves the grease gun, check the latches and screws securing the closing lid.
3. If the grease leaks spontaneously from the gun, check that the gun clamps are undamaged.

REMEMBER!

	Be careful!
	Use safety goggles
	Read the instruction manual carefully
	Use hand protection

Warranty card

Equipment:.....

Model:.....

Sale date :.....

Additional information:

.....
Sign and stamp of seller

Terms of warranty

Equipment used in accordance with the instruction manual should work properly. The warranty is valid for 12 months from the date of purchase. After finding a fault, please contact a qualified service center or directly with the seller. The condition for considering the complaint is a sealed warranty card and proof of purchase of the device. If we meet all warranty conditions, the complaint is accepted for consideration.

1. The deadline for considering complaints is 14 business days.
2. The cost of delivery and receipt of the advertised goods is borne by the owner of the goods.

The warranty does not cover:

1. Exchange of consumable parts and consumables.
2. Activities covered by the instructions for use, which the user is obliged to do.
3. Mechanical damage caused by improper use.
4. Damage caused by external factors.

Loss of warranty occurs when:

1. We do not follow the rules of use contained in the instructions.
2. We use the device in places not intended for it.
3. We use not the right consumable.
4. We interfere in the construction of the device.

Remember!

All factory defects are subject to warranty. They are not subject to a warranty of damage caused by improper use and improper operation.



SMAROWNICA NOŻNA 6L

Instrukcja Obsługi

ZASADY BEZPIECZEŃSTWA – ZAPOZNAJ SIĘ Z INSTRUKCJĄ

PRZED UŻYTKOWANIEM URZĄDZENIA

1. Sprawdź czy w miejscu pracy jest porządek.
2. Oceń czy warunki panujące w miejscu użytkowania smarownicy są bezpieczne.
3. Przechowuj sprzęt w miejscu suchym oraz niedostępnym dla dzieci.
4. Smarownicy należy używać wyłącznie do zadań dla niej przeznaczonych.
5. Przed użyciem smarownicy, przygotuj się, ubierz odpowiedni strój roboczy oraz obuwie ochronne – antypoślizgowe.
6. Urządzenie może przyskać smarem, dlatego chroń wzrok, załóż okulary.
7. Sprawdź stan techniczny urządzenia. Jeśli znajdziesz jakieś uszkodzenia, oddaj smarownice do uprawnionego serwisanta.
8. Upewnij się, że wszelkie narzędzia którymi regulowana była smarownica zostały z niej usunięte.
9. Podczas użytkowania należy być w pełni skoncentrowanym aby uniknąć wypadku przy pracy lub uszkodzenia urządzenia.
10. Zabrania się użytkowania smarownicy po spożyciu alkoholu, narkotykach oraz leków spowalniających reakcję.
11. Serwisu urządzenia powinien dokonywać wykwalifikowany personel.

SPECYFIKACJA URZĄDZENIA

Model	S1903
Pojemność zbiornika:	6L
Wydajność na jeden cykl:	3-5gram smaru
Długość węża:	1,8m
Max ciśnienie robocze:	20-25Mpa
Rodzaj napędu:	Dźwigniowy pedał nożny
Rodzaj układu:	membranowy
Waga netto:	10kg

ZASTOSOWANIE URZĄDZENIA

Smarownica nożna to narzędzie do wtłaczania smaru w układy hydrauliczne. Smar o odpowiedniej gęstości jest tłoczony przez wąż ciśnieniowy. Ciśnienie jest wytwarzane przez siłę naszych mięśni poprzez naciskanie dźwigni smarownicy. Smarownice nożne są jednym z najczęściej używanych narzędzi tego typu w przemyśle i produkcji. Narzędzia te są niezawodne, ponadto są proste w użyciu, bardzo wydajne oraz co najważniejsze przedłużają czas działania części zagrożonych tarciem w dużych i ciężkich pojazdach. Smarownica znajduje szerokie zastosowanie w samochodach, traktorach i wielu maszynach przemysłowych.

LISTA CZYNNOŚCI PRZED ROZPOCZĘCIEM PRACY

1. Odkręcić śruby zabezpieczające pokrywę smarownicy.
2. Wyciągnąć zespół pokrywy wraz z pompą. Aby tego dokonać należy przekręcić go o około 30 stopni i lekko pociągnąć. Nie szarpać.
3. Napełnić smarownicę wybranym smarem. Aby uniknąć zapowietrzenia należy mocno docisnąć smar do dna zbiornika.
4. Trzymając pionowo górną osłonę pojemnika należy delikatnie umieścić w nim górną tarczę.
5. Po otwarciu zaworu można przystąpić do pracy.

LISTA CZYNNOŚCI PODCZAS PRACY Z URZĄDZENIEM

1. Nakieruj pistolet ze smarem w wybrane miejsce.
2. Nałóż smar.
3. Przeczyść pistolet i miejsce pracy.

KONSERWACJA URZĄDZENIA

1. Pilnuj aby do pojemnika za smarem nie dostała się woda, gdyż spowoduje to korozję.
2. Jeżeli stosowany jest bardzo lepki smar należy dodać około 300ml oleju smarowego.
3. Nie należy skręcać i zaginać przewodu ciśnieniowego, gdyż skraca to jego żywotność oraz może doprowadzić do rozszczelnienia .
4. Podczas przerwy w pracy należy uwolnić ciśnienie ze smarownicy. Zwiększa to żywotność tłoku.
5. Należy czyścić i konserwować smarownicę oraz przewody.
6. Nie należy używać zanieczyszczonego smaru, gdyż może to doprowadzić do uszkodzenia smarownicy. Smar należy przechowywać w szczelnym pojemniku.

UWAGA!

Smarownica tłoczy smar pod dużym ciśnieniem dlatego nie wolno kierować pistoletu w kierunku ludzi lub zwierząt. Kontakt z materiałem nakładanym może spowodować podrażnienie skóry.


Jeżeli materiał wejdzie w kontakt z ciałem należy niezwłocznie opłukać ciało wodą.

Zaleca się również stosować odzież ochronną by zminimalizować ryzyko wystąpienia podrażnień.

Niektóre smary zawierają składniki rakotwórcze.

Pamiętaj o tym wybierając smar.

BUDOWA SMAROWNICY

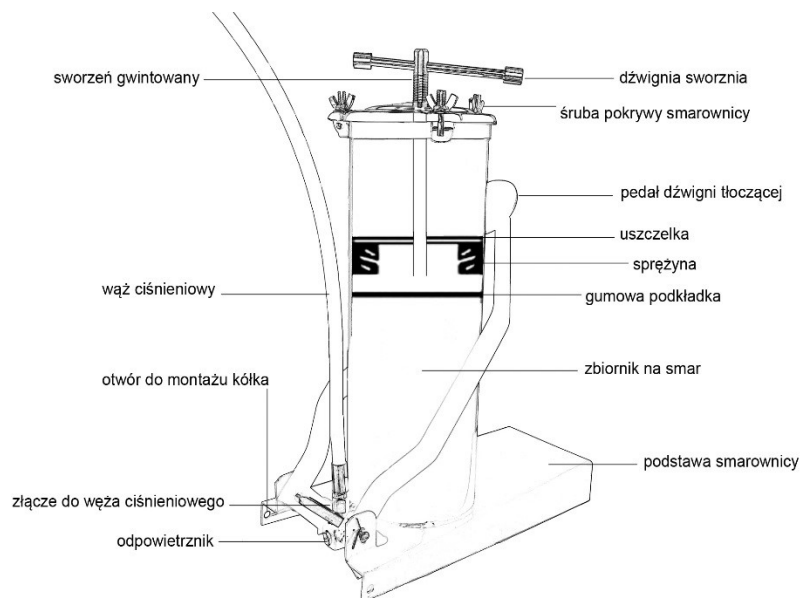

Wymiary smarownicy:

Podstawa 19.5cm x 40cm

Wysokość 55cm


Wąż pompy smaru z pistoletem do smarowania i wymienną dyszą:



PROBLEMY I ROZWIĄZANIA PODCZAS UŻYTKOWANIA

1. Gdy pistolet nie podaje smaru, sprawdź drożność węża oraz pistoletu. Jeśli wszystko jest w porządku, sprawdź czy smar nie jest za gęsty.
2. Gdy smar, wydostaje się ze smarownicy, sprawdź zatrzaski i śruby mocujące pokrywę zamykającą.
3. Jeśli smar wycieka samoistnie z pistoletu, należy sprawdzić czy zaciski pistoletu nie są uszkodzone.

PAMIĘTAJ!

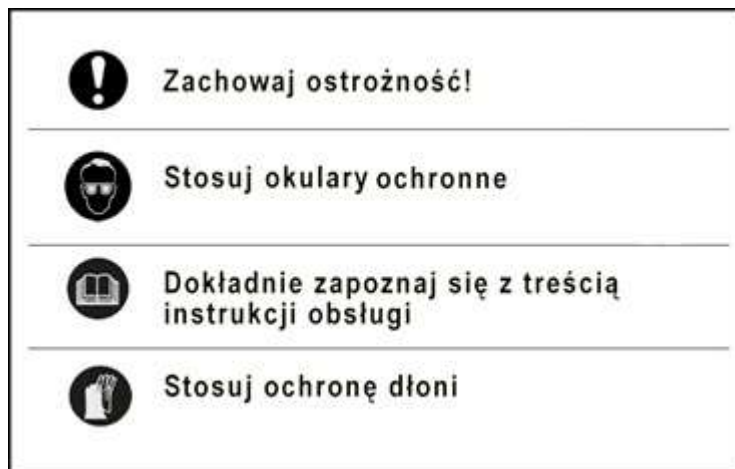

Karta Gwarancji

Sprzęt:.....

Model:.....

Data sprzedaży:.....

Dodatkowe informacje:

.....
Podpis oraz pieczęć sprzedawcy

Warunki Gwarancji

Sprzęt użytkowany zgodnie z instrukcją obsługi powinien działać prawidłowo.

Gwarancja obowiązuje przez 12 miesięcy od daty zakupu.

Po stwierdzeniu awarii należy skontaktować się z wykwalifikowanym serwisem lub bezpośrednio ze sprzedawcą. Warunkiem rozpatrzenia reklamacji jest opieczetowana karta gwarancji oraz dowód zakupu urządzenia. Jeśli spełniamy wszystkie warunki gwarancyjne

to reklamacja zostaje przyjęta do rozpatrzenia.

1. Termin rozpatrzenia reklamacji to 14 dni roboczych.
2. Koszt dostarczenia i odbioru reklamowanego towaru ponosi właściciel towaru.

Gwarancja nie obejmuje:

1. Wymiany elementów i części eksploatacyjnych, które ulegają zużyciu.
2. Czynności przewidzianych w instrukcji użytkowania, do których zobowiązany jest użytkownik.
3. Uszkodzeń mechanicznych spowodowanych przez niewłaściwe użytkowanie.
4. Uszkodzeń spowodowanych czynnikami zewnętrznymi.

Utrata gwarancji następuje, gdy:

1. Nie przestrzegamy zasad użytkowania zawartych w instrukcji.
2. Używamy urządzenia w miejscach do tego nie przeznaczonych.
3. Używamy nie odpowiedniego materiału eksploatacyjnego.
4. Ingerujemy w konstrukcję urządzenia.

Należy Pamiętać!

Wszelkie wady fabryczne podlegają gwarancji. Nie podlegają gwarancji uszkodzenia spowodowane nie prawidłowym użytkowaniem i niewłaściwą eksploatacją.